


INSTALLATION INSTRUCTIONS

Model : Sidewinder

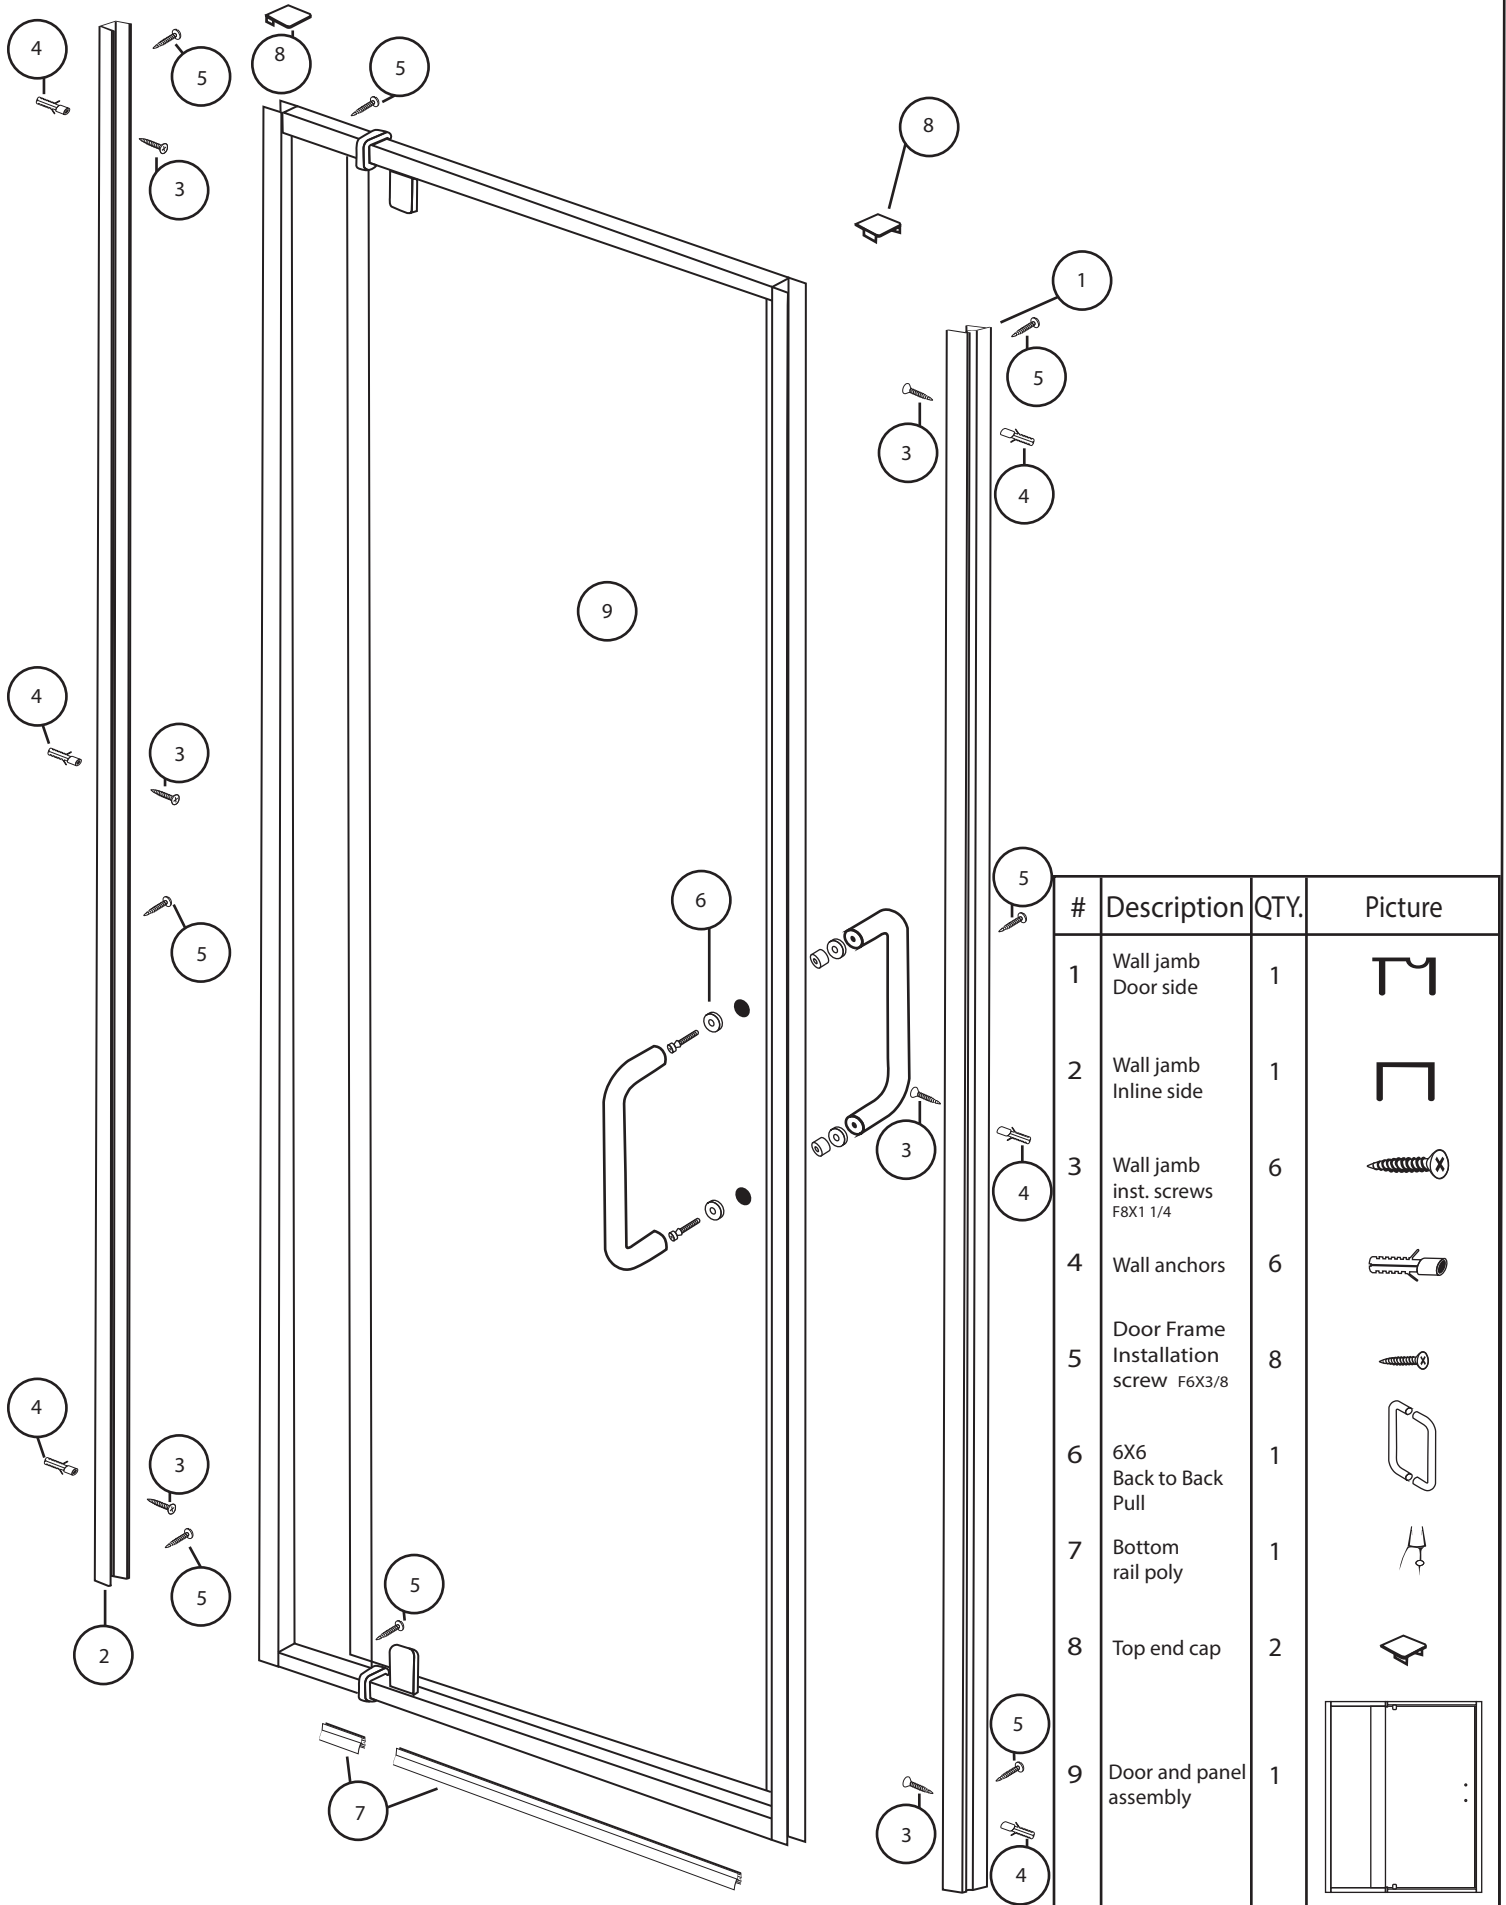

#	Description	QTY.	Picture
1	Wall jamb Door side	1	
2	Wall jamb Inline side	1	
3	Wall jamb inst. screws F8X1 1/4	6	
4	Wall anchors	6	
5	Door Frame Installation screw F6X3/8	8	
6	6X6 Back to Back Pull	1	
7	Bottom rail poly	1	
8	Top end cap	2	
9	Door and panel assembly	1	

Safety Warning

The Sidewinder is constructed using tempered safety glass, which reduces the risk of injury. In order to minimize the risk of serious injury, these instructions must be followed as written. Any deviation from these instructions can result in serious injury.

Step 1:

Find the middle of your curb, set and plumb the 2 wall jambs on your centerline and mark the holes with a marker. Drill holes with a 3/16" drill bit and insert wall anchors.

Step 2:

Attach wall jambs to the wall by using 6 (F8 X 1 ¼) screws.

Step 3:

Slide the door assembly into wall jamb on fixed panel side. Drill 1/8" pilot holes and secure on the inside with 3 (F6X 3/8) screws.

Step 4:

Telescope the door side of the assembly into opposite wall jamb, being sure to plumb level the door. Drill 1/8" pilot holes and secure with 3 (F6 X 3/8) screws.

Step 5:

Drill 1/8" pilot holes. Attach F6 X 3/8 screw into top and bottom to secure telescope extrusion.

Step 6:

Slide vinyl sweep onto the bottom of the door (2 pieces, 1 long and 1 short)

Step 7:

Attach the 6 X 6 back to back pull.

Step 8:

Silicone inside and out of wall jambs and bottom of door assembly. Allow the enclosure to cure for 24 hours before use.

Clean glass and aluminum weekly with a mild bathroom cleaner to maintain optimal appearance.