


INSTALLATION INSTRUCTIONS

Model
ETE-ESE-3/8 - 2

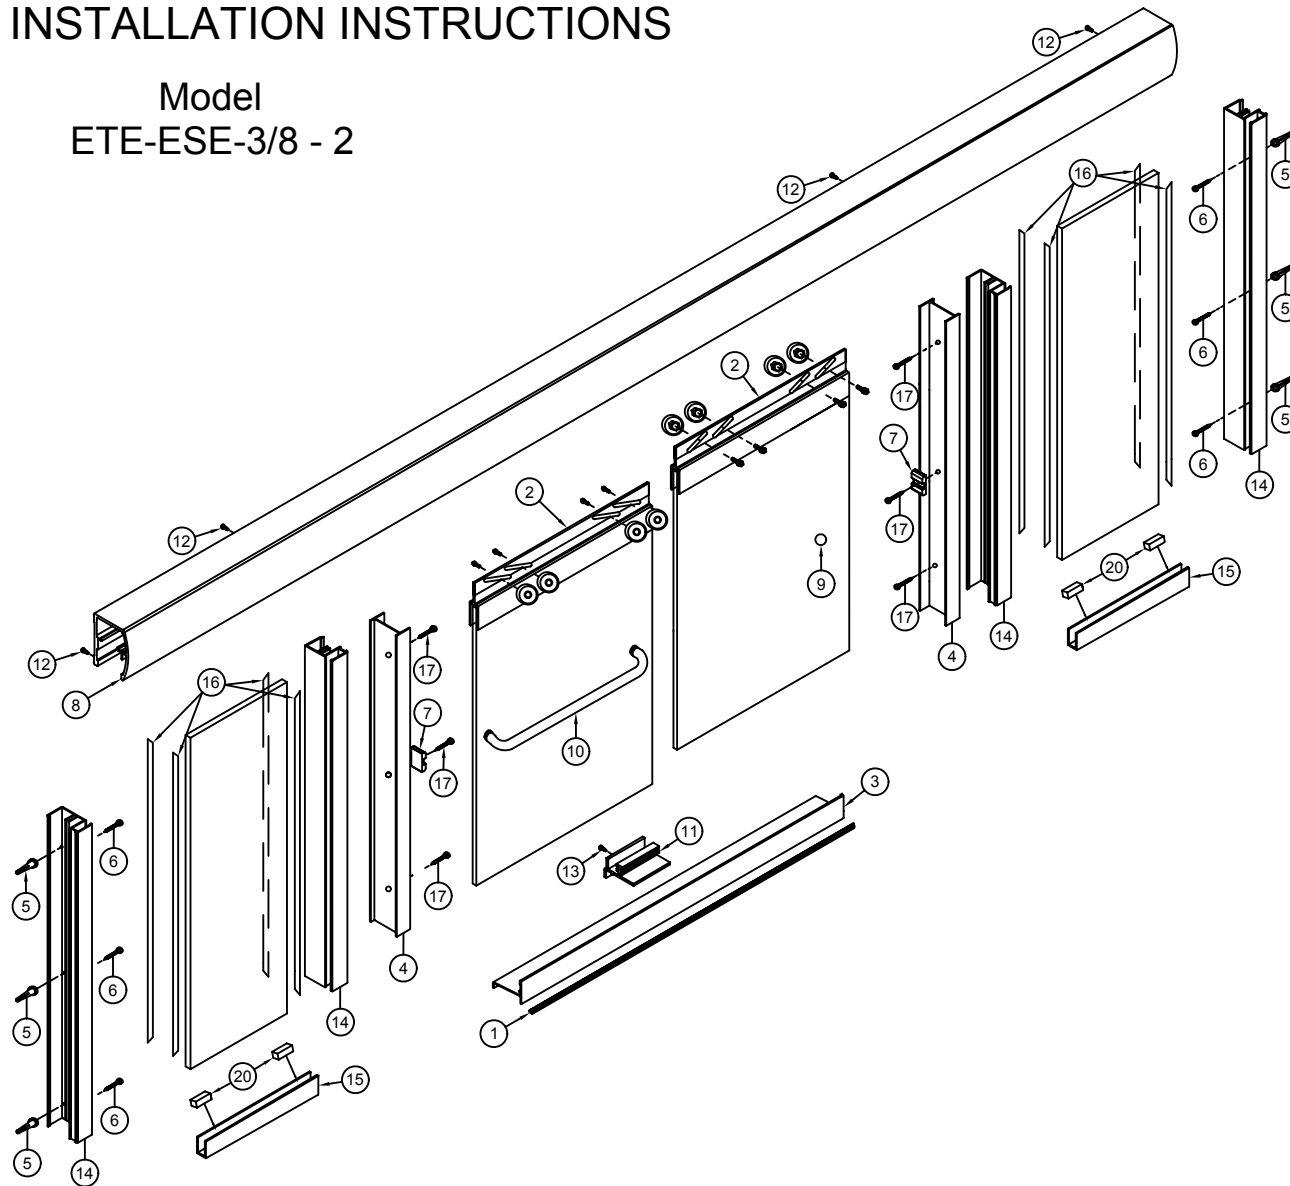

When ordering replacement parts, please provide the following information:

1. Part Number
2. Part Name
3. Model Number
4. Specify design (if any)

To install your Shower Enclosure you will need the following:

- Level
- 1/8" and 9/64" Drill Bits
- (Tile) 3/16" Masonary Bit
- Phillips Screwdriver
- Sealant
- Hack Saw

#	Description	Qty	Part #	Picture
1	Curb Vinyl	1	ZV-961	
2	Full Top Rail	2	ZTE-3238	
3	Curb	1	ZTE-7222	
4	Wall Jamb	2	ZTE-7203	
5	Screw Anchor	6	ZV-935	
6	#8x1 1/4 Pan Head Screw	6		
7	Jamb Bumper	2	ZV-927	
8	Header	1	ZTE-2601A	
Glass with 1/2" Holes				
9	Pull Knob	1	ASD1	
10	Towel Bar	1	ASD24S	
Glass with 7/8" Holes				
9	Pull Knob	1	ASD1R	
10	Towel Bar	1	ASD24R	
11	Center Guide	1	ZV-975	
12	#6x1/4 Machine Screw	3		
13	#6x3/8 Machine Screw	1		
14	180 Jamb Post	4	ZTE-7218	
15	Buttress Curb	2	ZD-1014	
16	Vertical Wedge Vinyl	8	ZV-909	
17	#8x1 Pan Head Screw	6		
18	Roller Wheel	8	ZA-99	
19	#8/32x3/8 CH	8		
20	Glass Setting Blocks	4	ZV-902	

Arizona Corporate Office
2801 W. Indian School Rd
Phoenix, AZ 85017
800-255-1901 PH
602-447-8208 FAX

Florida
8100-1 Westside Industrial Dr
Jacksonville, FL 32219
855-695-8899 PH
904-786-9025 FAX

Illinois
2601 Bond St #1
University Park, IL 60484
800-861-6120 PH
708-235-0729 FAX

Oregon
2057 Lars Way
Medford, OR 97501
866-773-7905 PH
541-773-7909 FAX

Colorado
3871 Revere Street
Denver, CO 80239
866-574-1766 PH
303-574-1775 FAX

Utah
2594 S. 3600 West Suite A
West Valley City, UT 84119
877-402-5007 PH
801-972-3111 FAX

ARIZONA SHOWER DOOR





Tools you will need for this install

- ✓ Exploded View drawing of shower door
- ✓ 3/16" Masonry drill bit (use 9/64" drill bit for fiberglass)
- ✓ 1/8" drill bit
- ✓ Drill
- ✓ 4' Level
- ✓ Saw (Electric Chop saw or Hacksaw)
- ✓ Side cutting pliers
- ✓ #2 Phillips drill bit
- ✓ #2 Phillips screwdriver
- ✓ Tape Measure
- ✓ Pencil or Pen
- ✓ Caulking Gun
- ✓ 1-Tube of 100% Clear Silicone (no latex!)
- ✓ Vacuum Cleaner or Brush for clean up
- ✓ Glass Cleaner and Paper Towels
- ✓ Rubber Mallet
- ✓ File

INSTALLATION INSTRUCTIONS
FOR
MODEL ETE-2-3/8 & ESE-2-3/8

Note: These instructions will refer to the item #'s in the Exploded View drawing. For example, #1, #2, #3 etc...
Please read through **all** of the instructions to get an over-view **before** you install the door.





1) Typical placement for the shower door is in the center of the curb or tub ledge. Make marks on the curb/tub ledge to represent where the **outside** of the shower door will sit. These marks should correspond with the dimensions the shower door was ordered to. **Note: The glass pocket in the ZTE7218 is offset to the outside.** Place the ZTE-7218 Wall Jambs (item #17 in exploded view) against the wall of the shower on each side and on top of the ledge or curb aligning the outside edge of the jambs to the outside marks that were previously made **(A)**. **(Note:** Holes may need to be drilled in ZTE-7218 glass pocket) Use a level to position the jamb plumb, then mark the installation holes with a pen or pencil **(B)**. **NOTE:** If you are installing on fiberglass you might have to file a radius on the backside of your jambs where the ledge/curb and the wall meet.

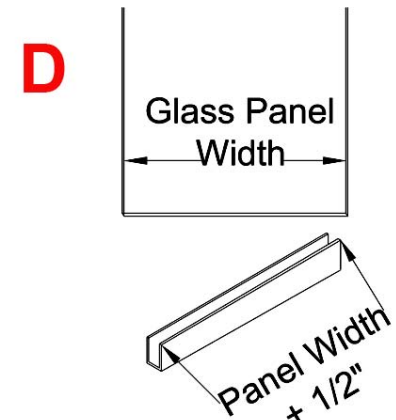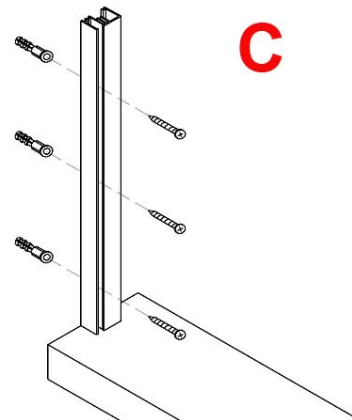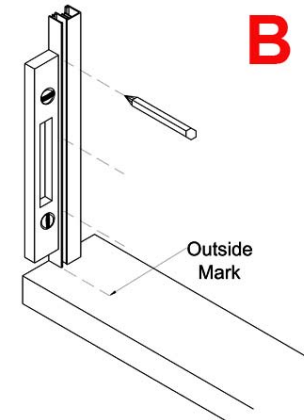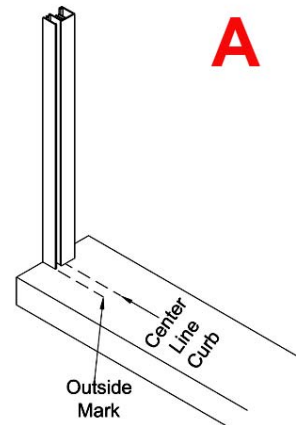

2) Now drill the 6 holes with a 3/16" masonry bit (9/64" regular bit for fiberglass, & without anchors). Then insert the 6)-ZV935 screw anchors (#2) in the holes. Fasten the ZTE-7218 wall jambs in place using the #8X1-1/4 Phillips Pan Head screws provided (#13) **(C)**.

3) Cut the ZD-1014 Buttress Curbs (#18) 1/2" wider than the inline panels of glass. These are the horizontal channels that hold the fixed panel **(D)**. Put a dab of silicone in the inside corner of the ZTE-7218 Wall Jamb then insert the ZD-1014 and push over into the ZTE-7218 aligning it to the outside marks that were made in step 1 **(E)**. **Note:** The ZD-1014 will be secured after the final step of running silicone at the end of the install. When the silicone cures then the ZD-1014 will be solid.

4) Cut two setting blocks at 1/4" tall and insert them down into the ZD-1014 for the glass to sit on. Then place the fixed panel into the wall jamb and down into the bottom channel until the bottom channel extends past the glass approximately 1/4" **(F)**. Attach the ZTE-7203 and the ZTE-7218 by screwing the two pieces together using the #8X1-1/4 Phillips Pan Head screws provided (#3) **(Note:** This may be a 1" screw depending on the model). Place the 180° Post which consists of a ZTE-7203 Wall Jamb (#1) and a ZTE-7218 180° Jamb Post (#17) attached together, over the edge of the glass **(G)**. Insert the ZV909 Wedge Vinyl (#19) into


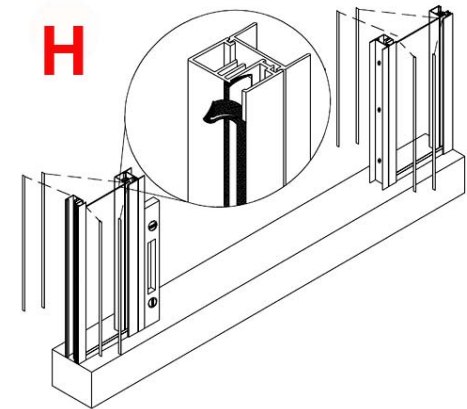
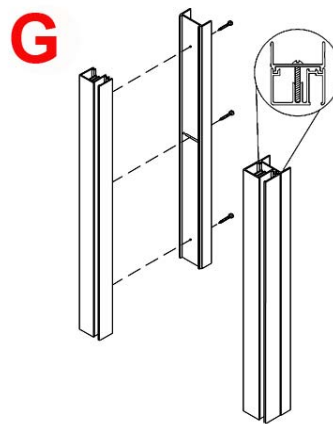
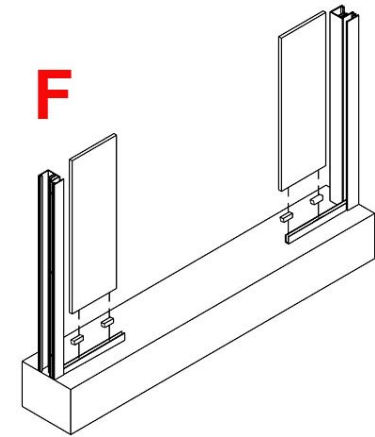
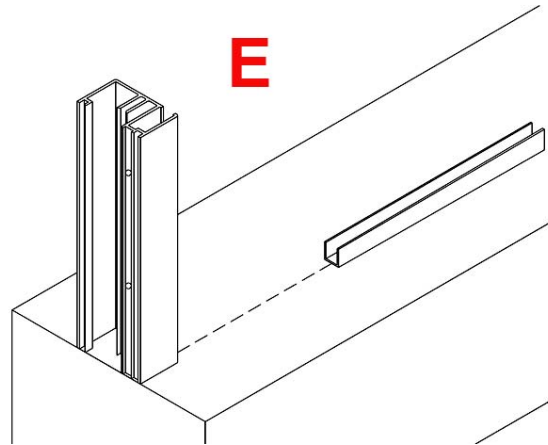


the vertical jambs on both sides. A block of wood will help push the vinyl in. Wet the vinyl slightly with water to ease install. The flat side goes against the glass. Make sure the posts are plumb **(H)**. Repeat this process for the other panel on the opposite side.

5) Measure the distance wall to wall above the jambs for the ZTE-2601A Header (#8) dimension. Cut to size. Place the header over and down on to the jambs **(I)**.

6) Measure for the ZTE-7222 (#6) by measuring the distance between the inside of the two ZTE-7203 Jambs then cut the ZTE-7222 (#6) to that dimension minus a 1/16" to 1/8" **(J)**. Run some silicone on the inside of the ZTE-7203's where they meet the curb/tub ledge. Then run a bead along the underneath of the ZTE-7222 Curb **(K)**. Slide the curb down between the wall jambs and onto the tub/shower. Secure it with two of the #6X3/8" Pan Head Screws (#13) provided by drilling with a 1/8" drill bit through the outside legs of the ZTE-7203 wall jambs at the bottom, into the face of the curb and inserting the screws **(L)**.


7) Plumb the 180° Jamb/Posts (#1+#17) and attach the header to the Jambs and Posts from the inside using #6 x 3/8" Phil Pan Head Screws (#13). Attach the ZV975 Bumpers (#4) using the #6/32X1/2 Machine screw (#5) keeping in mind

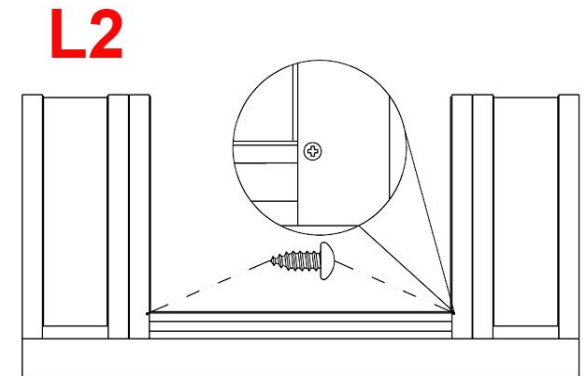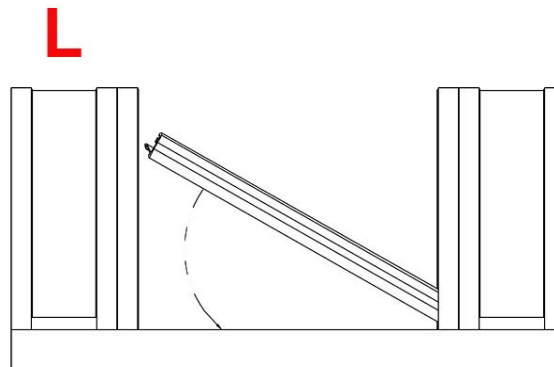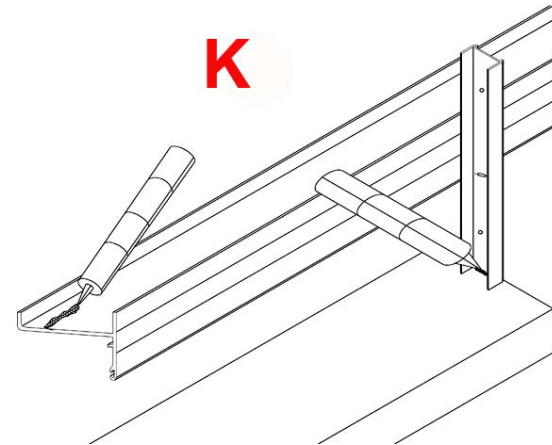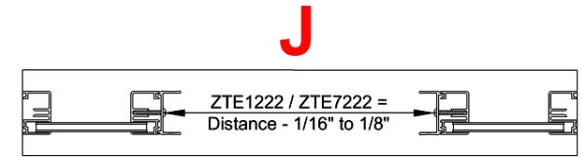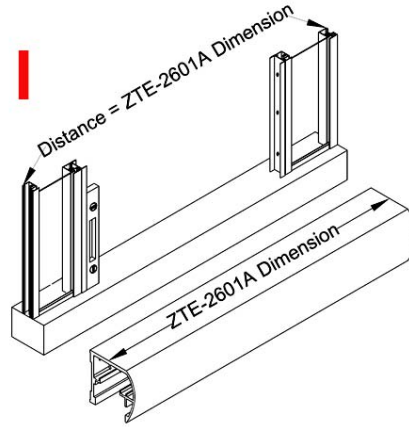


that the inside panel will be on the showerhead side of the shower **(M)**.

8) Setting of the glass. The inside panel will be set first. This will be done as you stand on the **outside** of the shower. Grip one of the panels on each side so that the rollers are facing **away** from you. Lift the panel so that the bottom edge of the glass clears the top of the ZTE7222 Curb as you lower it into the shower. **Do not set the glass down on its edge. Be very careful to not hit the edge on anything.** Continue lowering the panel down until the top rollers can be guided up into the inside roller track of the header. Lift up glass then slowly lower the rollers into the inside roller track and let the panel hang in its vertical position. The outside panel will be installed the same way. Make sure the rollers are facing **toward** you. A helper would be valuable at this point to hold the inside panel on an angle toward the inside so the outside panel can be lowered and positioned to be installed into the outside roller track. The inside panel will be positioned at the showerhead side of the shower while the outside panel will be positioned opposite the showerhead. This is to ensure that no water escapes through the overlap **(N)**.

9) Adjust Rollers. The roller wheels are mounted to angled slots in the top rail on the glass. Lowering the roller in the slot raises the glass. Raising the roller in the slot lowers the glass. Start out with the rollers mounted in the middle of the angled slot. If the panel needs to be adjusted you can remove the panel, adjust with a screwdriver then, reset the panel. This might be done one or two times until you

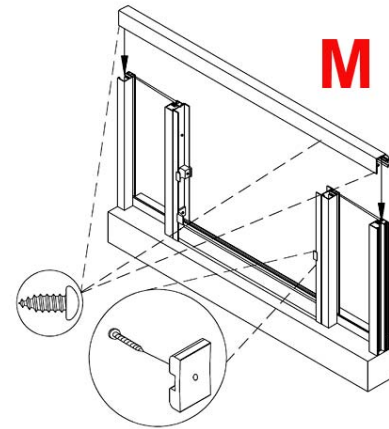




N

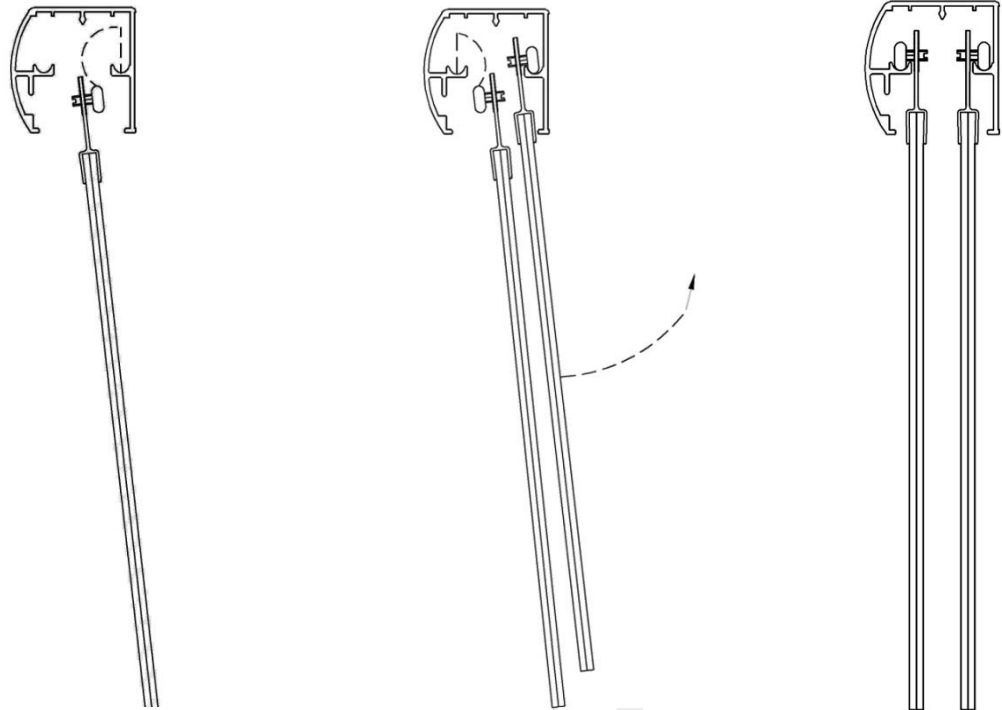

achieve proper alignment. The end result should be that the vertical edge of the panel is parallel to your wall jamb to achieve maximum coverage **(O)**.


10) Attach the ZV927 Center Guide. Slide both panels to one end. The front lip of the guide slips into a slot on the inside of the front edge of the ZTE7222 Curb. Position the guide just to the side of the panels, slip the front lip in, then snap the guide down over the inside of the curb. Slide the guide over carefully. When the doors are in a closed position the center guide should be centered in the overlap of the glass. For added security you can attach the guide after it is snapped in place by drilling with a 1/8" drill bit through the snap in leg into the curb (from the inside of the shower) then running a #6X3/8 screw into the hole **(P)**.

11) **please see attached before proceeding*
Attach the ASD-1 (#10) Knob Pull by inserting the threaded bolt with grommet through the hole. This will be the inside panel with one hole which will be on the showerhead side of the opening. The knob should be on the inside. Also make sure the plastic washers provided are on each side of the glass. Use the small Allen wrench provided to insert into the small hole on the bolt head. Turn and tighten the bolt until the knob is secure. Over tightening can cause the glass to blow up **(Q)**.

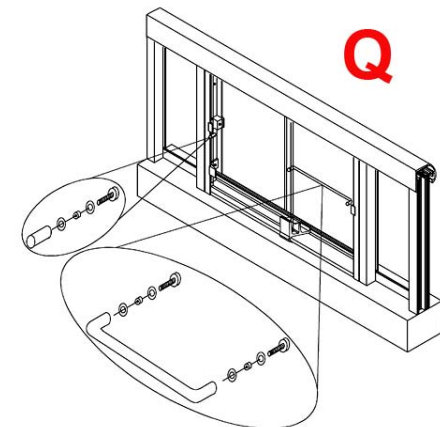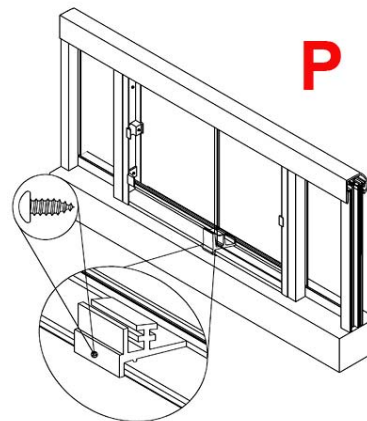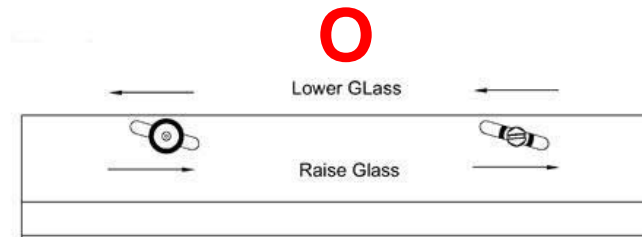

12) Attach the towel bar on the outside panel with two holes using the same method as the knob in step 7 **(Q)**.

13) Run a bead of silicone on the gap between the metal and the shower surface inside and out. Fill all joints and gaps where metal meets metal and fill with a fine bead. Run a bead also in the gap where the ZD-1014 and the glass meet **(R)**.

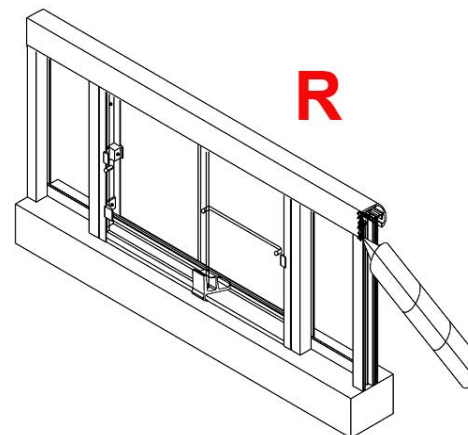



Towel bar and Pull Handle Addendum

Due to design changes in the **LETET, LESET, ETE, and ESE** Series of bypass shower enclosures. There are now two separate types of pull handle and towel bars. The (ASD1) pull handle and the (ASD#T) towel bar are designed for glass with 1/2" holes. While the (ASD1R) pull handle and (ASD#R) towel bar are designed for glass with 7/8" holes. While ordering replacement parts please specify hole dimension.(1/2" or 7/8").

**** # = centerline width of the towel bar (ex: 18", 24", and 27") ****