


INSTRUCTION MANUAL

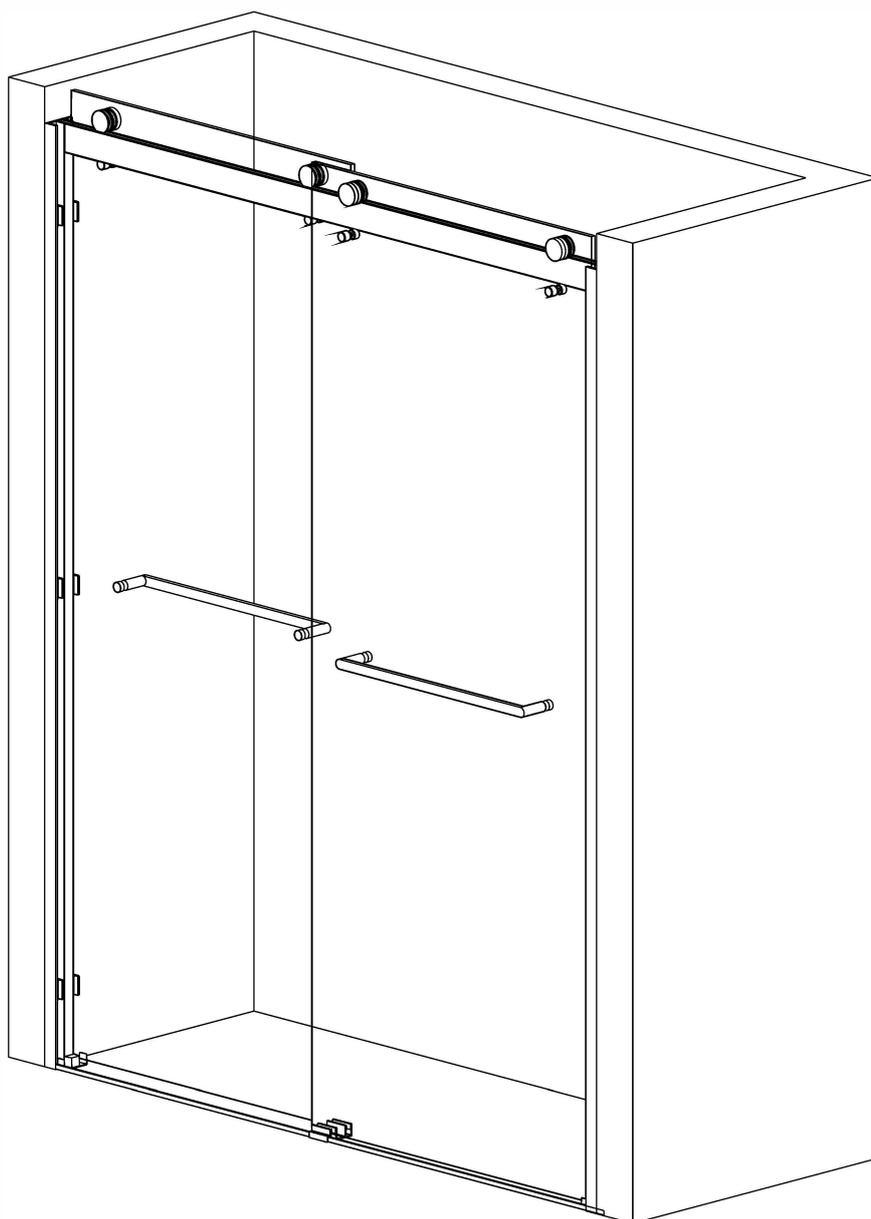

2 PEOPLE RECOMMENDED

Please keep this manual for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.





CARE FOR YOUR SHOWER DOOR

- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.

An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and metal parts looking new.


- We recommend wiping the glass panels with a squeegee after each use.

TOOLS REQUIRED

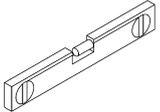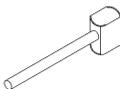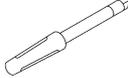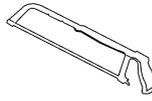
 SPIRIT LEVEL	 POWER DRILL	 PENCIL	 100% SILICONE	 MALLET
 TAPE MEASURE	 SCREW DRIVER	 6mm&3mm(1/4" & 1/8") DRILL BITS	 HACKSAW	 SAFETY GLASSES

* Use a 6mm(1/4") drill bit for ceramic when drilling into ceramic tiles

CHOOSE A CONFIGURATION

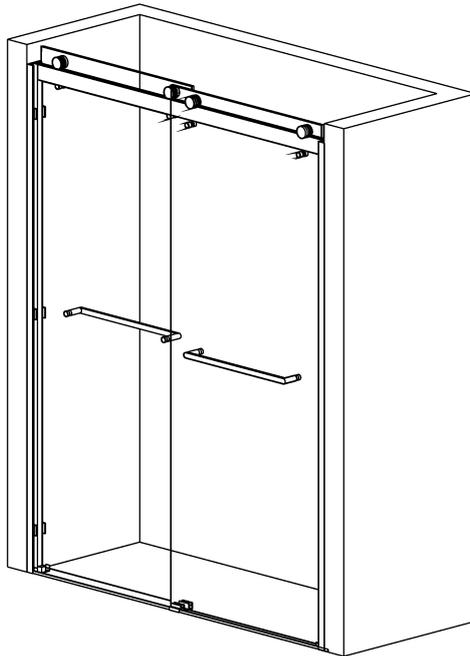





PARTS LISTING

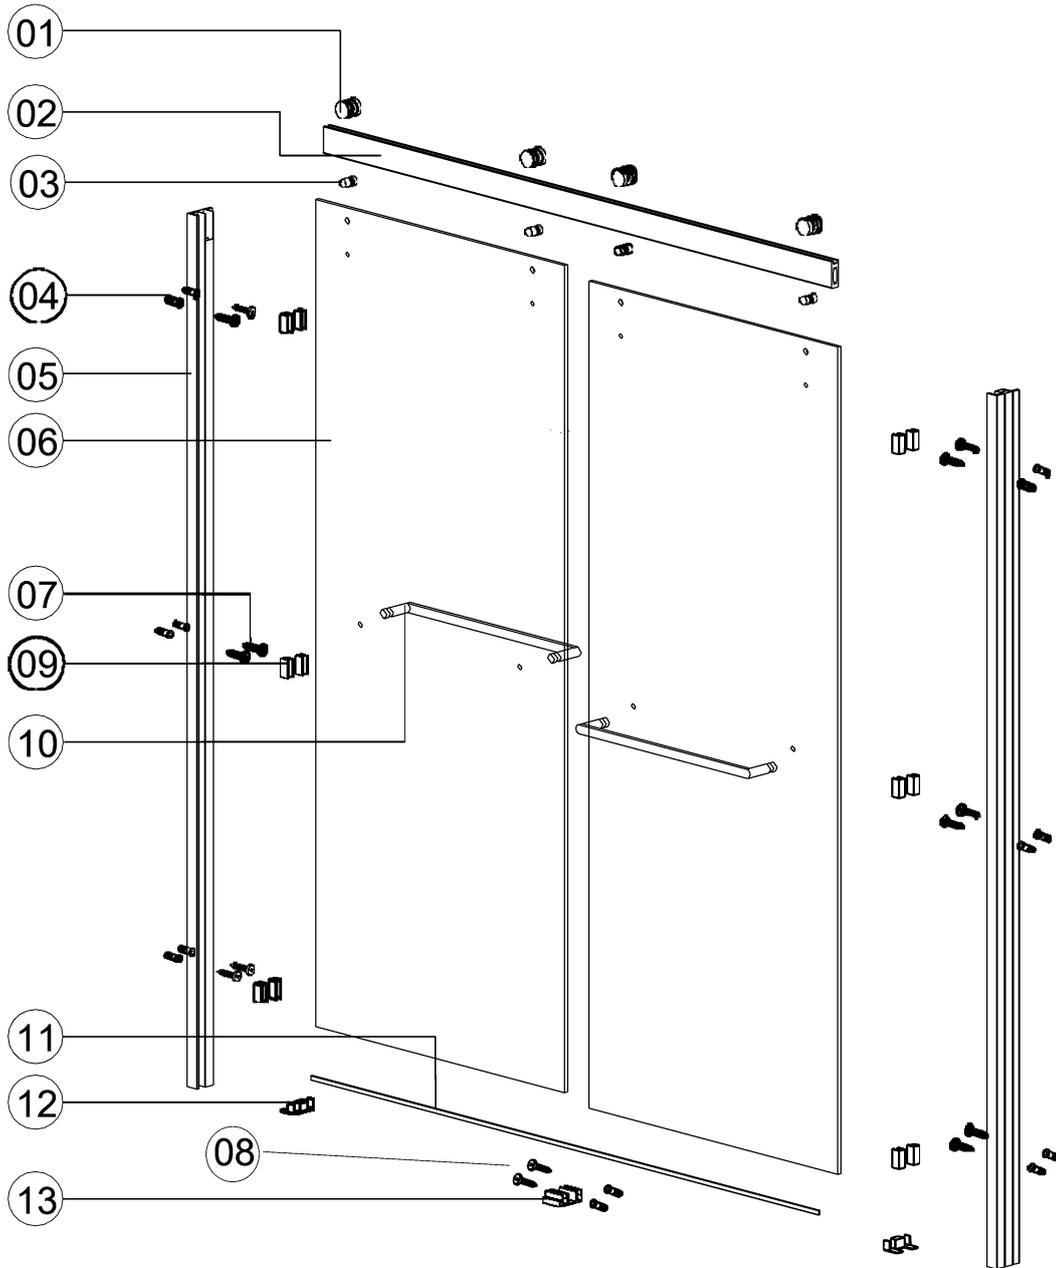


ITEM	PARTS	DIAGRAM	QTY
01	Roller		4
02	Rail		1
03	Anti jumping knob		4
04	Wall plugs Ø6		14
05	Wall profile		2
06	Sliding door		2

ITEM	PARTS	DIAGRAM	QTY
07	Screw St4x30		12
08	Screw St4x25		2
09	Anti Collision Block		12
10	Towel bar		2
11	Anti-splash threshold		1
12	Side Wall Guard		2
13	Floor guide		1





1

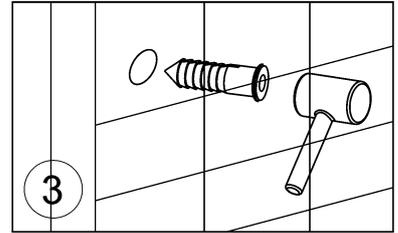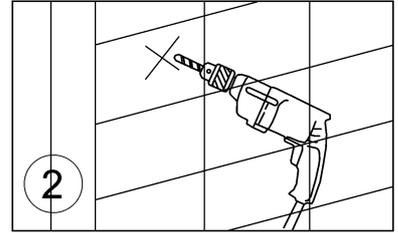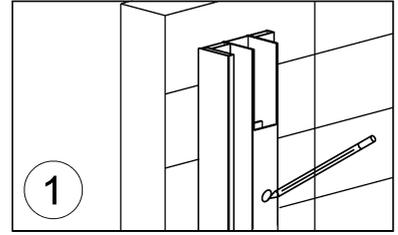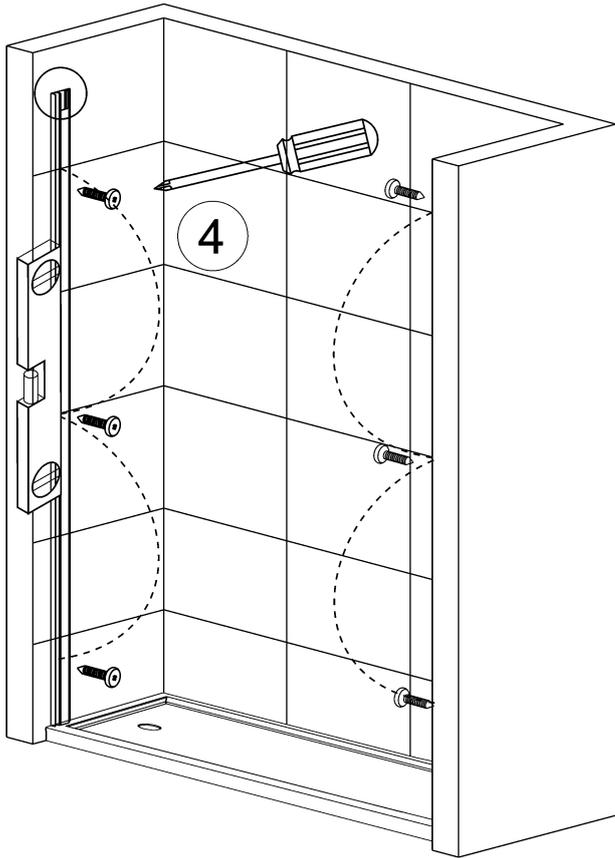

2

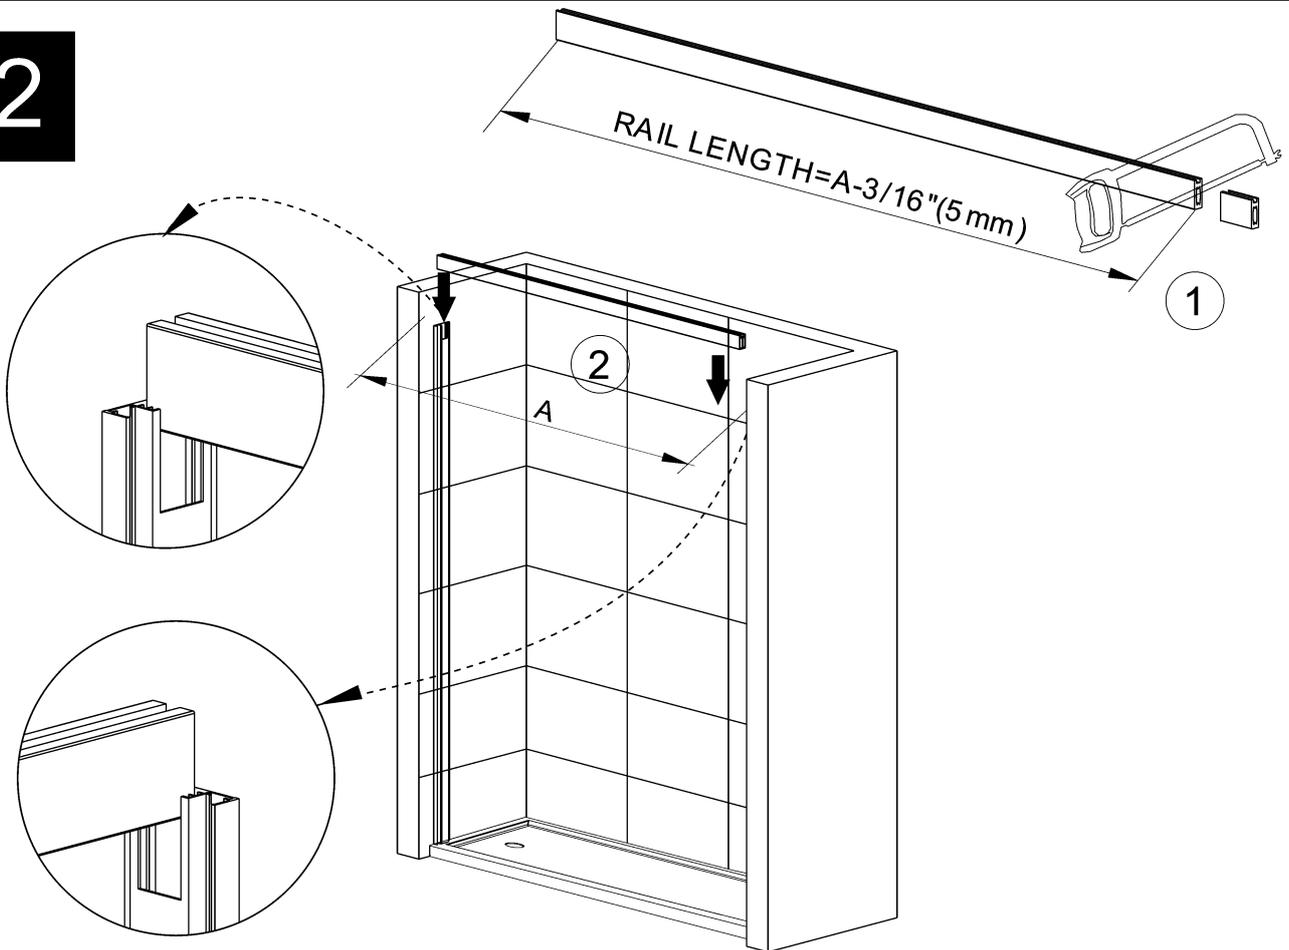




3

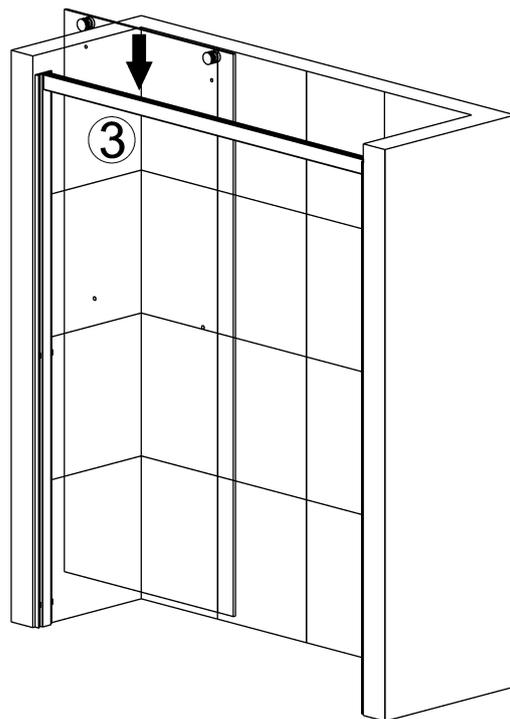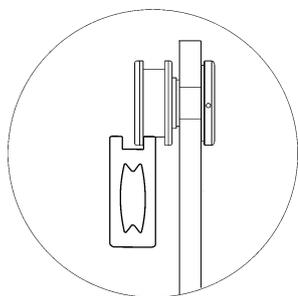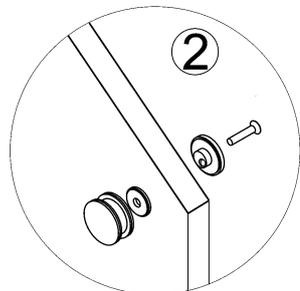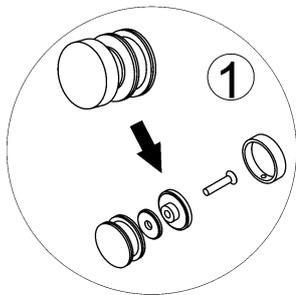


TIP: Once the upper guide wheels are installed on inner door panel, carefully place inside shower for later install

4




TIP: You may want to proceed to Steps 5 & 6 before hanging the glass panels.

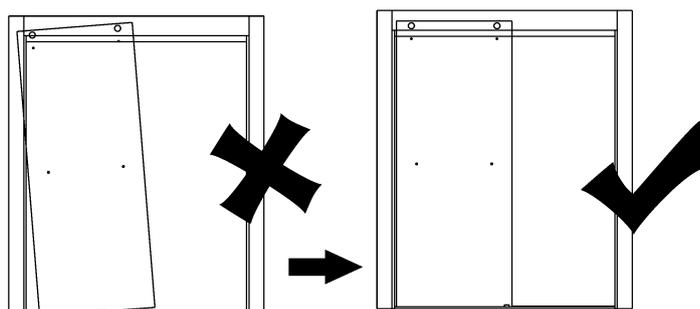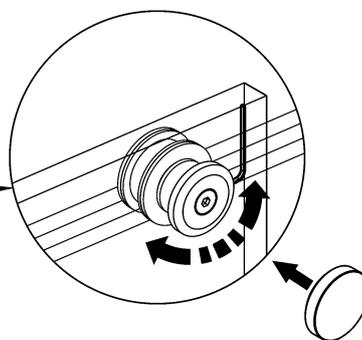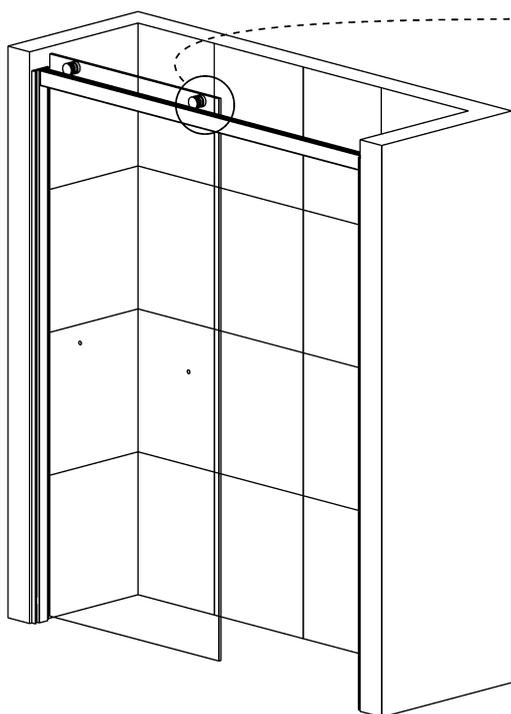





5

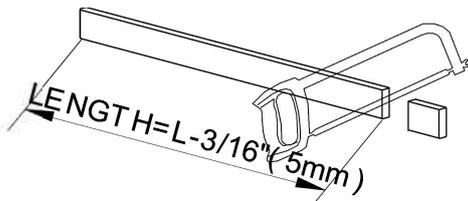





TIP: Put some 100% silicone under the guide before securing screws.

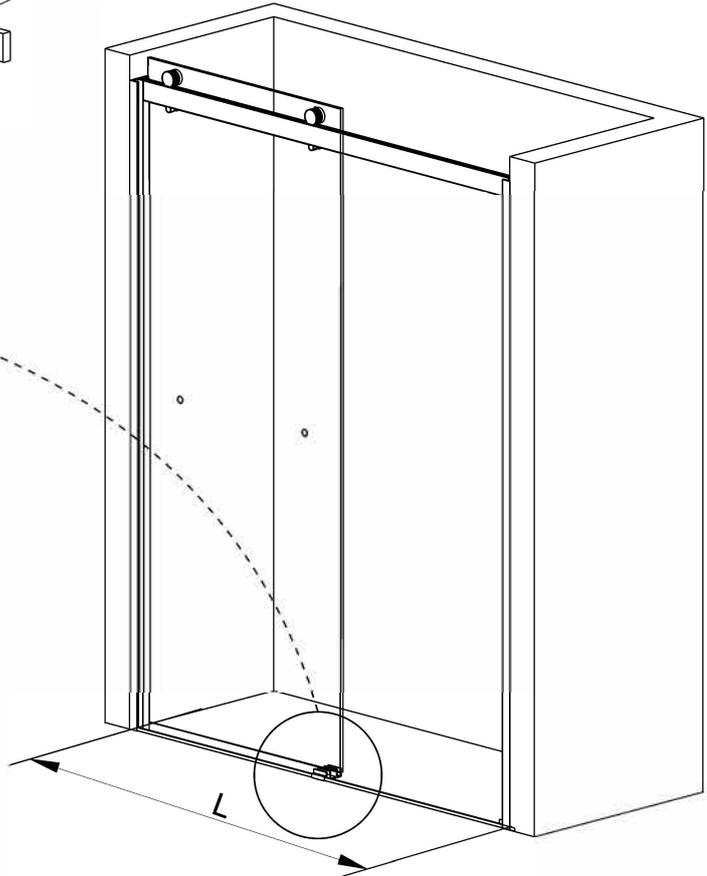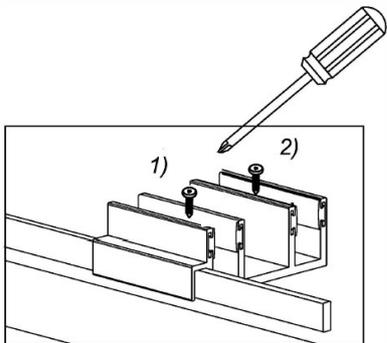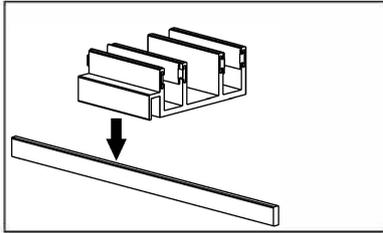





6

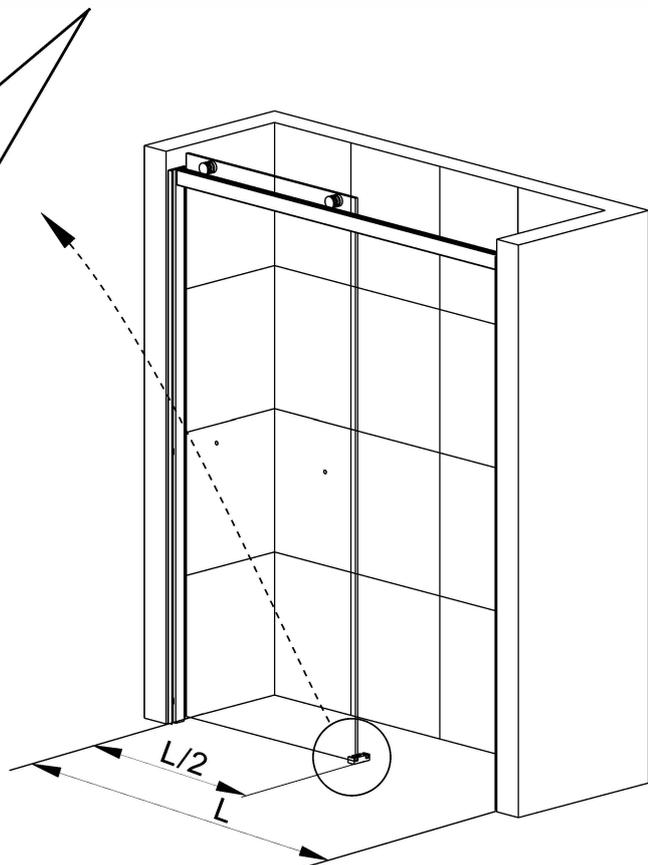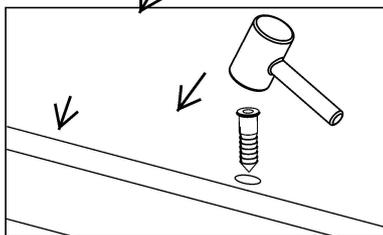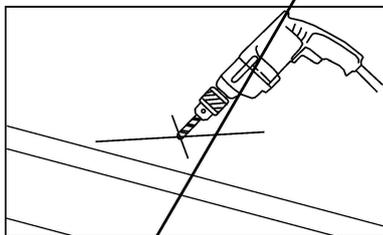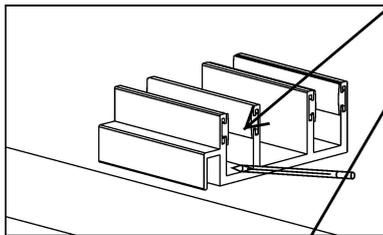





7

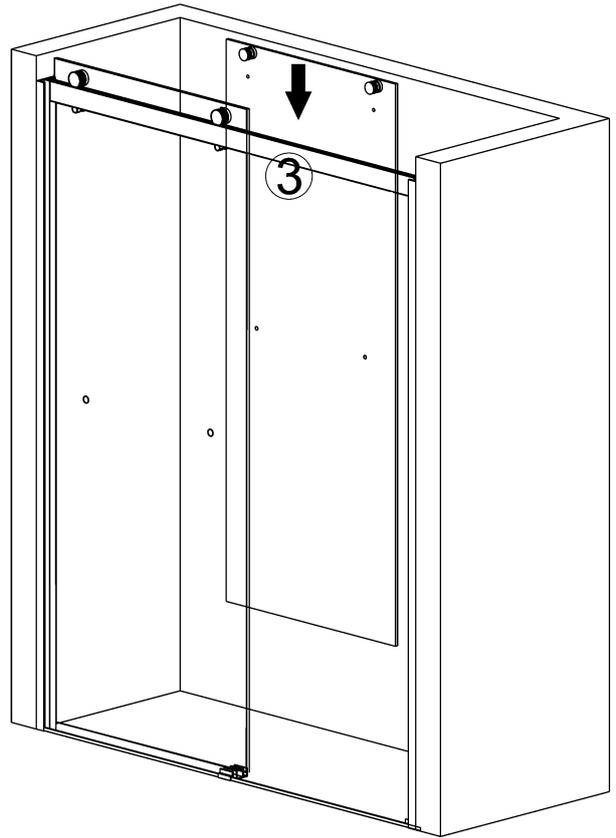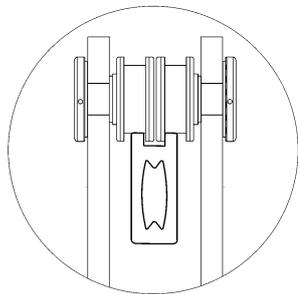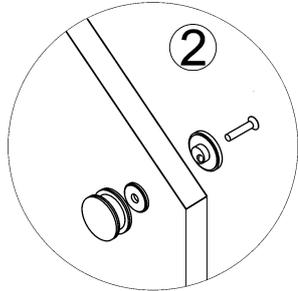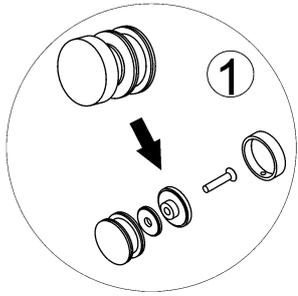

8

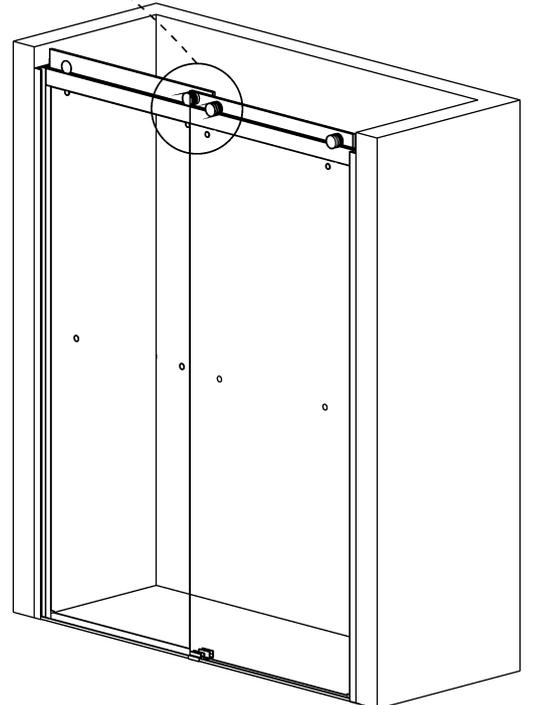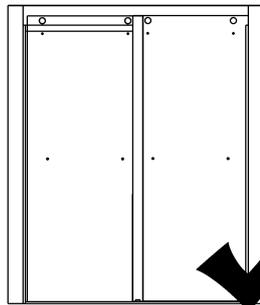
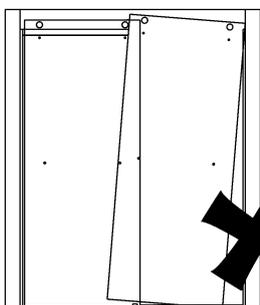
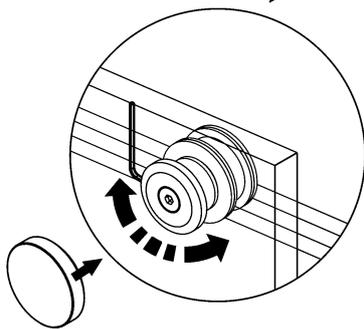


9

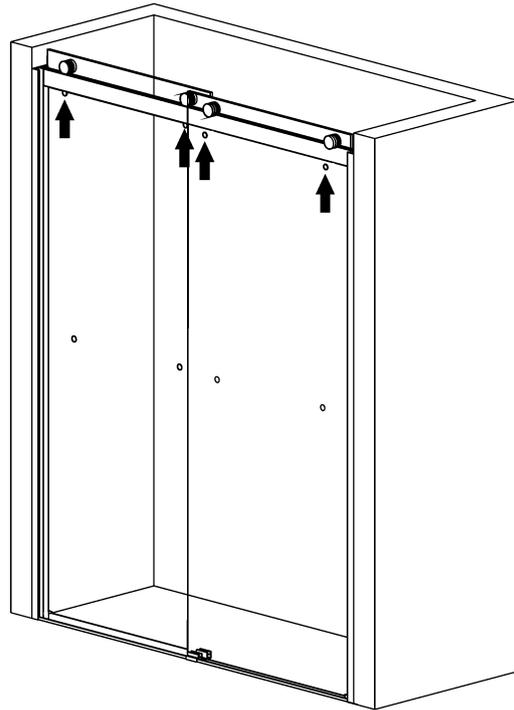
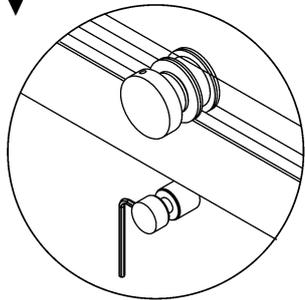
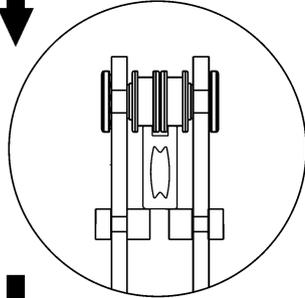
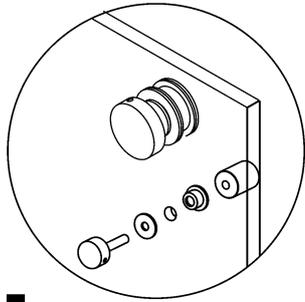


**Install Anti-Jump Guide 1/16 below header rail*

10

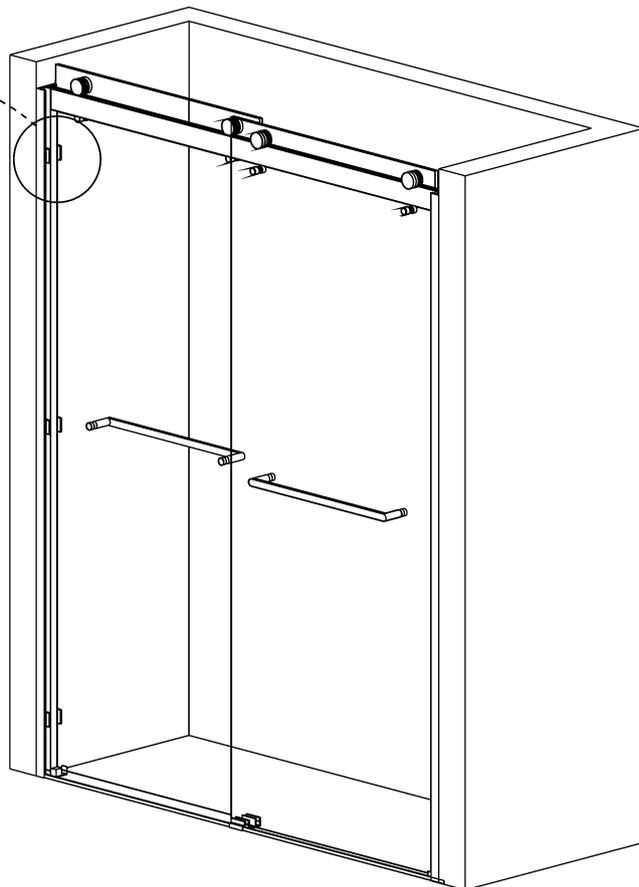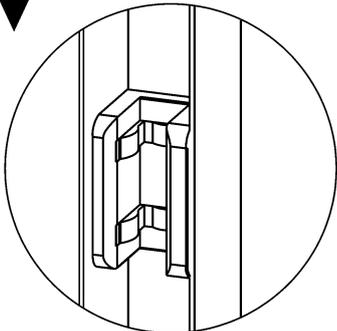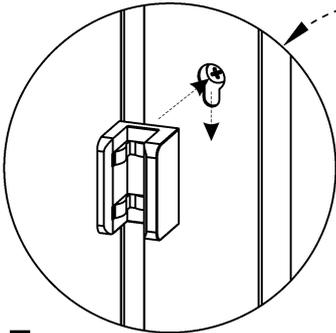


11

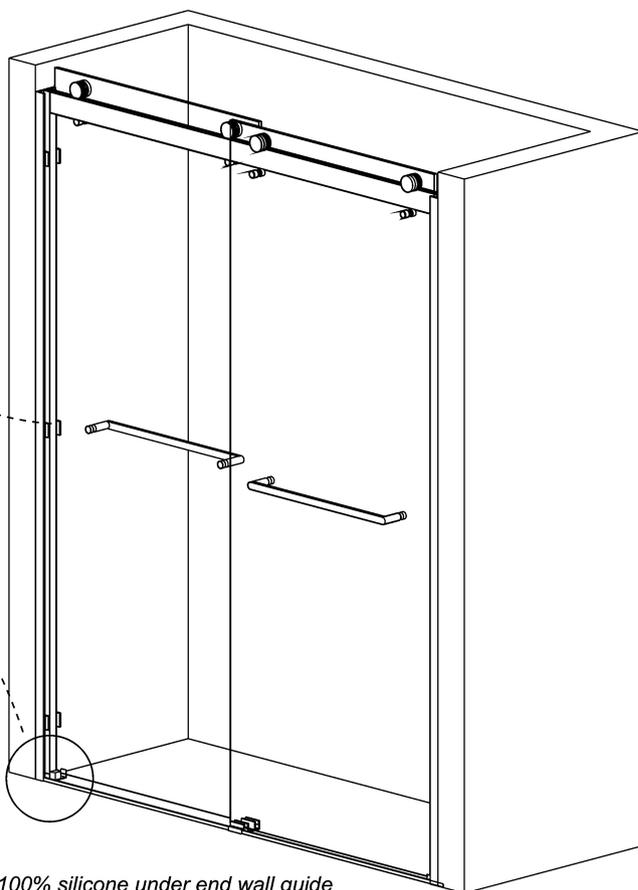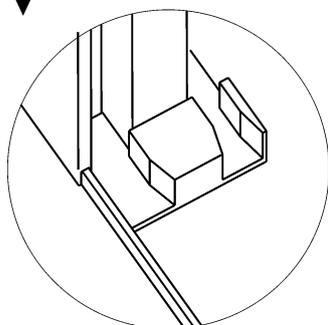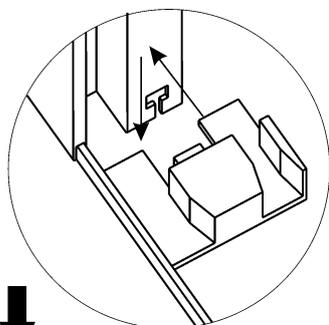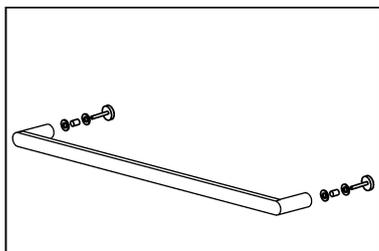

TIP: Place 100% silicone under end wall guide before installing into wall jamb

12

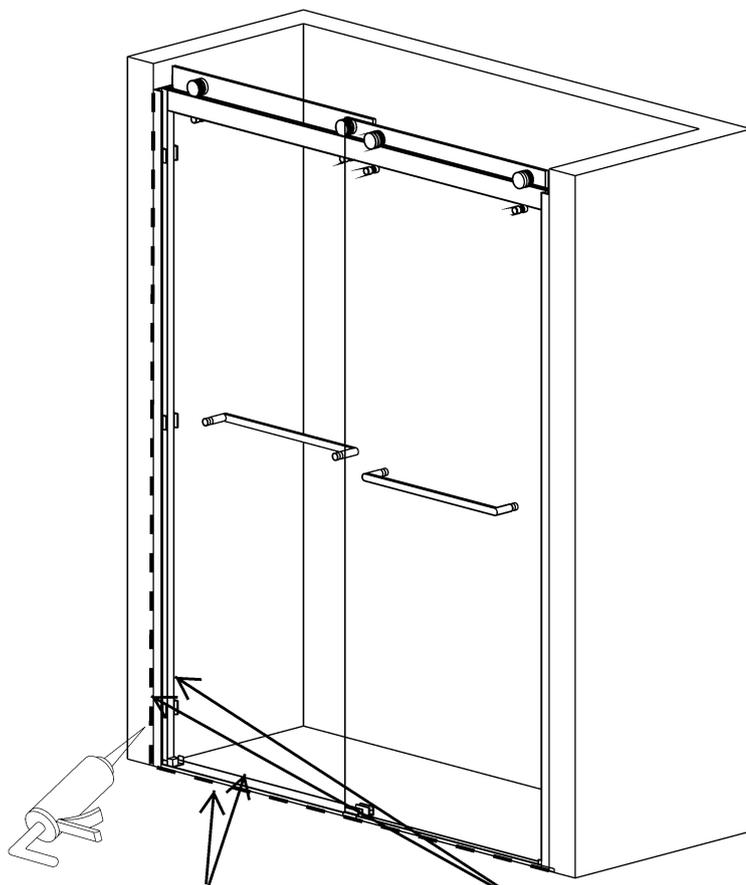

NOTE: Make sure to caulk-in BOTH sides of the anti-splash threshold and side door jambs



24 HOURS