


INSTALLATION INSTRUCTIONS

Model MP Door

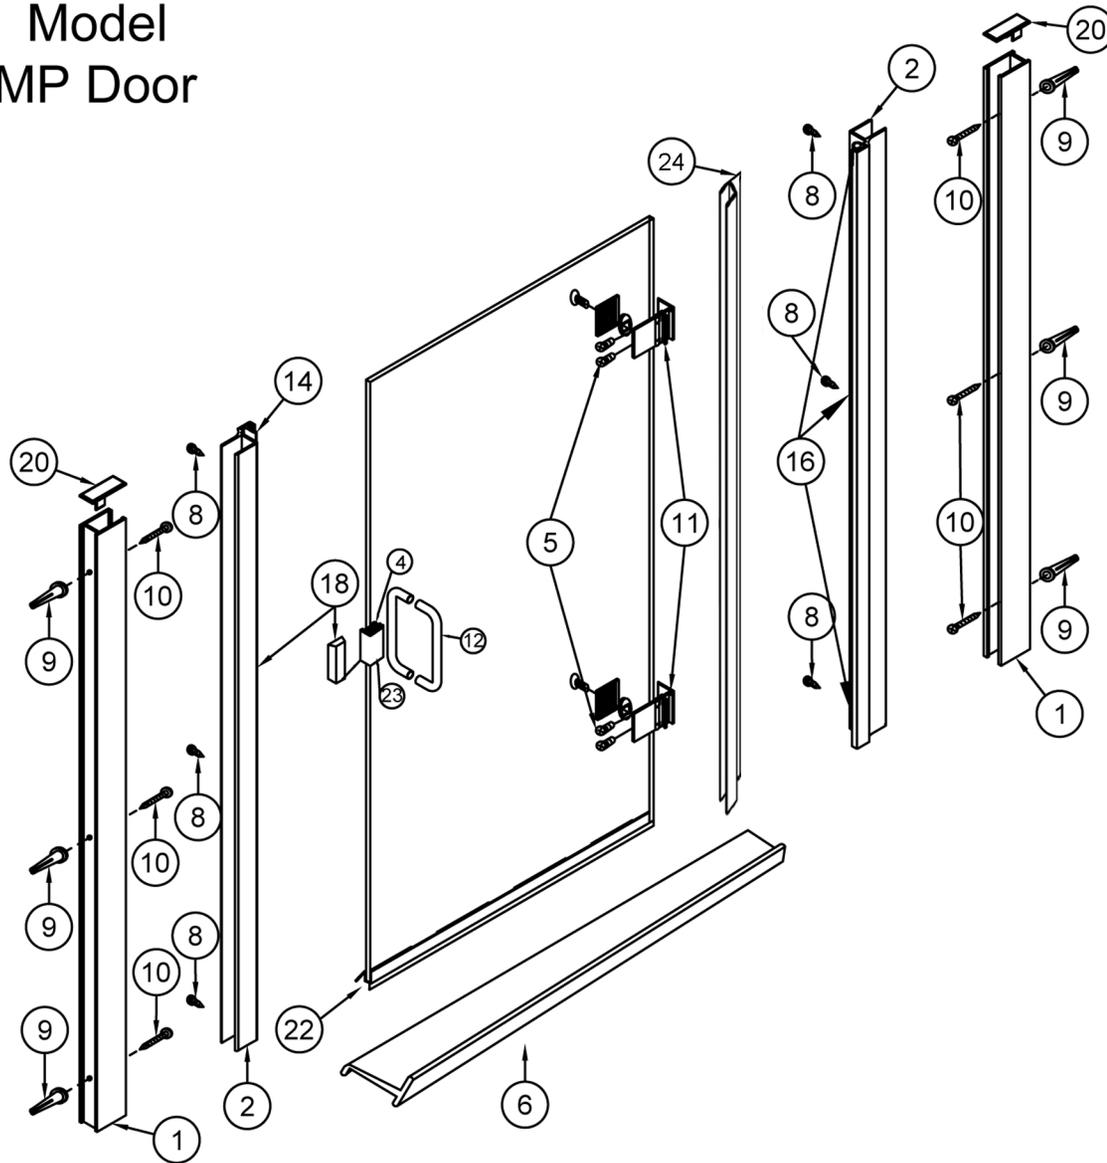

#	Description	Qty	Part #	Picture
1	Wall Channel Jambs	2	ZD-1006	
2	Mag Latch Jamb	2	ZD-8004	
3				
4	Mag U-Channel	1	MAG-4012	
5	#8 x 1/4SS	4		
6	Dam Strip	1	ZD-2026	
7				
8	#6X3/8" PH SMS	6		
9	Wall Anchors	6	ZV-935	
10	#8X1 1/4" PH SMS	6		
11	Patch Hinge	2	ASD-600F	
12	Back to Back Pull	1	ASD 8X8 T	
13				
14	Strike Gasket	2	ZV-907	
16	Bulb Seal	3	ZV-919	
17				
18	Magnet	2	MAG4013	
19				
20	Door Clip	2	ZV-940	
22	Bottom Rail-1/4" Poly	1	ZVP-14WS	
23	Handle Gasket 1/4"	1	ZV-916	
24	Hinge Seal	1	P14WS	

When ordering replacement parts, please provide the following information:

1. Part Number
2. Part Name
3. Model Number
4. Specify design (if any)

To install your Shower Enclosure you will need the following:

- Level
- 1/8" and 9/64" Drill Bits
- (Tile) 3/16" Masonry Bit
- Phillips Screwdriver
- Sealant
- Hack Saw

Arizona Corporate Office
2801 W. Indian School Rd
Phoenix, AZ 85017
800-255-1901 PH
602-447-8208 FAX

Florida
8100-1 Westside Industrial Dr
Jacksonville, FL 32219
855-695-8899 PH
904-786-9025 FAX

Illinois
2601 Bond St #1
University Park, IL 60484
800-861-6120 PH
708-235-0729 FAX

Oregon
2057 Lars Way
Medford, OR 97501
866-773-7905 PH
541-773-7909 FAX

Colorado
3871 Revere Street
Denver, CO 80239
866-574-1766 PH
303-574-1775 FAX

Utah
2594 S. 3600 West Suite A
West Valley City, UT 84119
877-402-5007 PH
801-972-3111 FAX

ARIZONA SHOWER DOOR

Tools you will need for this install





- ✓ Exploded View drawing of shower door
- ✓ 3/16" Masonry drill bit (use 9/64" drill bit for fiberglass)
- ✓ 1/8" drill bit
- ✓ Drill
- ✓ 4' Level
- ✓ Saw (Electric Chop saw or Hacksaw)
- ✓ Side cutting pliers
- ✓ #2 Phillips drill bit
- ✓ #2 Phillips screwdriver
- ✓ Tape Measure
- ✓ Pencil or Pen
- ✓ Caulking Gun
- ✓ 1-Tube of 100% Clear Silicone (no latex!)
- ✓ Vacuum Cleaner or Brush for clean up
- ✓ Glass Cleaner and Paper Towels
- ✓ Rubber Mallet
- ✓ File

Installation Instructions for Model MP Door



Note: These instructions will refer to the item #'s in the Exploded View drawing. For example, #1, #2, #3 etc...
Please read through **all** of the instructions to get an over-view **before** you install the shower door.

1) Find the centerline of where the unit will be installed. This will usually be the center of the curb of the shower pan. Place a centerline mark at each end of the curb where it meets the wall. This mark will also represent the center of the ZD1006 Wall Jamb (#1). Place the wall jamb against the wall and on top of the centerline marks **(A)**. Use a level to position the jamb plumb, then mark the installation holes with a pen or pencil **(A2)**. Repeat this procedure for the other jamb. Now drill the 6 holes with a 3/16" masonry bit (9/64" for fiberglass, & without anchors). Then insert the 6)-ZV935 screw anchors (#9) in the holes. Fasten the ZD1006 wall jambs in place using the #8X1-1/4 Phillips Pan Head screws provided (#10) **(B)**.


2) Slide the ZD8004 "Magnetic Latch Jamb" (#2) over the latch side wall jamb. **(Note:** There are two ZD8004's. The "Magnetic Latch Jamb" is **not** attached to the Door Glass.) Next install the door by sliding the ZD8004 "Door Hinge Jamb" (#2) over the hinge side wall jamb. Do not fasten the door at this point **(C)**.

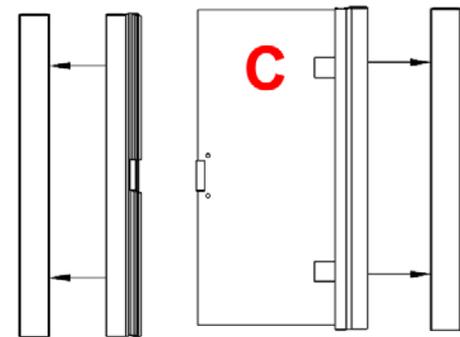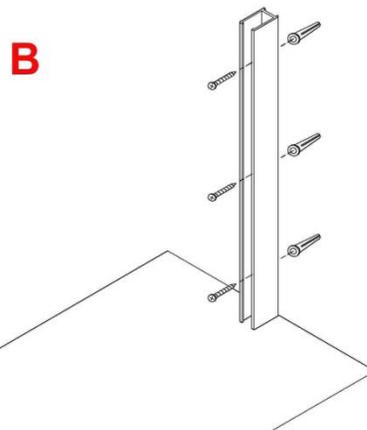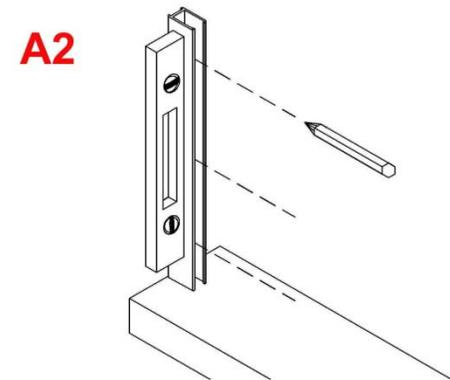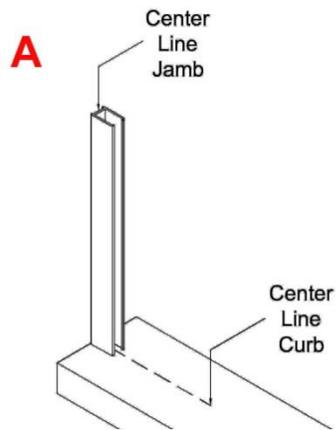


3) Note: (It will be helpful to have an assistant at this point to adjust and hold the door in place from the outside while you drill and fasten the latch jamb and the hinge jamb from the inside). First you will need to attach the MAG4012 (#4) by placing the ZV 916 for ¼" glass (#23) over the edge of the glass then tapping the MAG4012 over the gasket and on to the glass with a rubber mallet aligning it to the magnet on the latch jamb. (See **(F)** for help). Square up the door and align the edge of the door glass parallel with the latch jamb leaving a 1/16" gap between the ZD8004 and the MAG4012 **(D)**. Attach the door by drilling the six holes on the inside of the unit where the jambs are pre-drilled using an 1/8" drill bit and secure with the 6-#6X3/8" Pan Head screws (#8) **(E)**

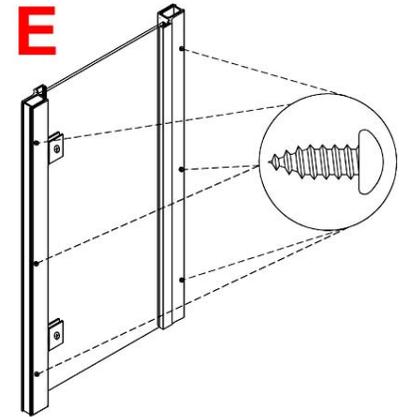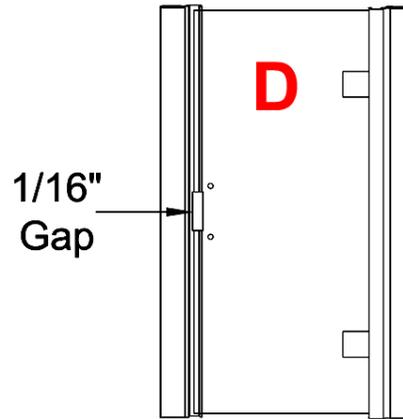



4) Attach the ASD 8X8 Handle (#12). Take the two stud head mounting screws and sleeve one clear washer on each screw. Next, insert the clear grommets into the holes in the door. From the outside of the door, push the thread of the screws through the grommets in the holes in the glass. On the inside of the door, sleeve a clear washer onto the screws. Take the pull that has the threaded hole in the end and begin to thread the top screw into it and then the bottom screw. Tighten the stud head screws down with a screwdriver (not a drill). This pull will be on the inside of the door. Place the remaining pull, with the large holes and set screw, onto the stud heads of the screws. Tighten the set screws with Allen wrench provided. **(F)**.

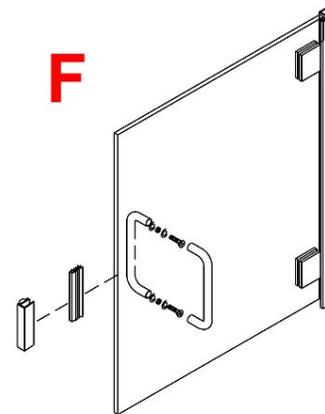


5) Place a small amount of silicone on the legs of the 2-ZV940 Door Clips (#20) and place down into the top of the 1006's to cap the opening. You may have to trim them to fit with side cutters **(G)**.

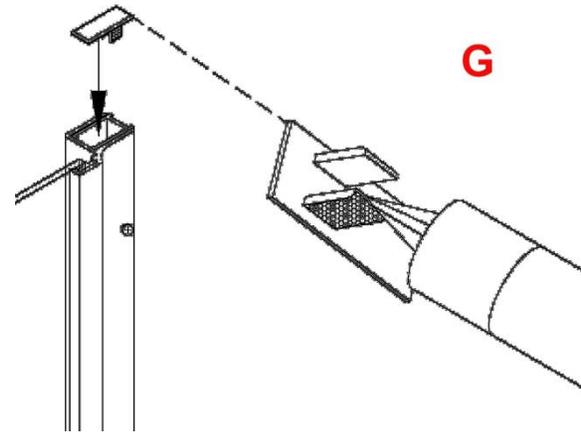

6) Measure in-between the ZD8004 "Magnetic Latch Jamb" and the ZD8004 "Door Hinge Jamb" on top of the curb where the door is going to sit. Cut the ZD2026 to this dimension. Run a bead of silicone underneath the ZD2026 then set in place between the two ZD8004's. Use tape to hold in place, preferably blue tape **(H)**.

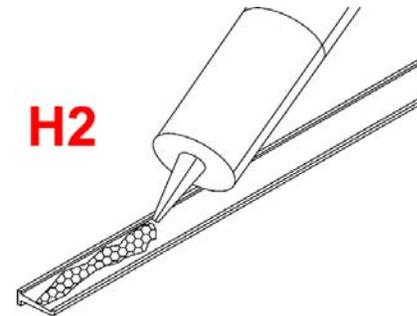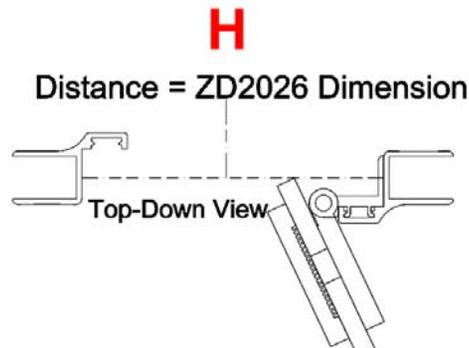

7) Cut the Bottom Poly Rail (ZVP-14WS for 1/4" glass (#22)) then push over the bottom edge of the glass. Run a cap bead of silicone on the inside where the glass and poly meet to prevent water seeping down into the sweep between the glass and poly. **(Note:** to ensure that the door will close completely, notch out the section of plastic that makes contact with the ZD8004 "Magnetic Latch Jamb") **(I)**.

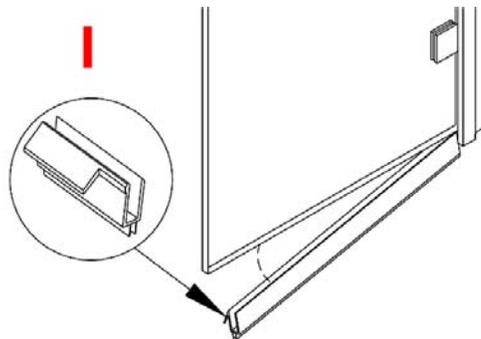

8) Run a bead of silicone on the inside and outside where the wall jamb meets the shower wall. Inspect the install and caulk any gap that might let water through **(J)**.

